

Please read these instructions before operating and retain for future reference.

## SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following :

1. To protect against electrical shock, do not put cord, plugs, or the motor assembly in water or other liquid.
2. No use by children intended and not allowed at all.
3. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
4. Avoid contacting motor parts.
5. Do not operate any appliance with damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorised service facility for examination, repair, or electrical or mechanical adjustment.
6. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
7. Do not use outdoors.
8. Do not let the cord hang over the edge of the table or counter.
9. Do not let the cord contact hot surfaces, including stove.
10. Do not place on or near a hot gas or electrical burner or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not place mixing jar on motor base while motor is running.
13. Do not remove mixing jar while motor is running.
14. Keep hands and utensils out of container while mixing to reduce risk of severe injury to person or damage to the machine.
15. Blades are sharp, handle carefully.
16. Always operate blender with the cover in place.
17. Do not mix hot liquids.
18. Be sure to turn switch to OFF position after each use.
19. Never leave the house while the appliance is ON.
20. After running motor continuously for three minutes, wait at least one minute before running the motor again.
21. Do not run motor while mixing jar is empty.
22. To disconnect, grip plug and pull from wall outlet. Never pull on cord.

## OPERATING INSTRUCTIONS

### ASSEMBLY

1. Make sure the appliance is unplugged.
2. Assemble the jar properly.
3. Plug cord into outlet.
4. Pour ingredients into the jar. Make sure that there is no water leaking from the jar.
5. Lock the lid into place on the top of the jar, insert the stopper into the hole in the lid.
6. Fit the jar base to the motor base, lock the jar base by turn it clockwise.
7. Press the desired speed button for food process.

### HOW TO FIX BLADES

Fix the blade on the shaft in the jar and tighten it by rotating anticlockwise until the blade is securely locked, use the spanner, provided in the handle of the spatula .

### FIXING OF GRINDER, LIQUIDISER & CHUTNEY JAR

After having fitted the blade that you require, carefully put the jar on top of the basic unit and ensure that the lock of the basic unit fits into the slot of the jars, rotate the jar clockwise until it fits firmly .

### OVER LOAD PROTECTION

In order to avoid any possible motor burning due to over loading this Mixer is fitted with an automatic power shut-off mechanism .

If the machine sometimes stops while in operation, this is a warning that your Mixer is overloaded. Switch off the mixer and wait for 2-3 minutes.

Allow the motor to cool down and also remove the cause of overload. The red button of the thermal relay switch located on the bottom plate of the Mixer has to be pressed by hand for re-operation.

### SPEED SELECTION

**Pulse/Ice Crush** button provides a burst of high speed for crushing ice for smooth, frozen drinks.

**Low** button runs the appliance at low speed for initial mixing of ingredients or while using pour spout

**High** button runs the appliance at high speed for final mixing of ingredients. Do not use this speed for pouring.

**Off** button shuts the appliance off .

### CLEANING & MAINTENANCE

1. Always switch off the unit before cleaning.
2. Do not immerse the motor base, plug or electrical cord in liquid. Use a damp cloth to clean these parts.
3. To clean jar use wet cloth & warm water.