WARRANTY TERMS AND CONDITIONS

Groupe SEB India (P) Ltd. ("Company") warrants to the purchaser of this Product that for a period of 1 years on product commencing from the date of purchase, the Company will repair or replace free of charge any part or parts of the product, should the Company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only. The warranty will be governed by the following clauses:

- 1. This warranty is valid only if this card is duly signed and stamped by our dealer and is produced along with the original customer's copy of the purchase bill.
- 2. Warranty period starts from the date of purchase from our authorized dealer only.
- 3. The Appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
- 4. The Appliance should not be repaired, tampered or altered by any agency or person other than an authorized company
- 5. The Appliances subject to normal wear & tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not coverd by this warranty.
- 6. Plastic Parts, which are breakable, are not covered under this warranty.
- 7. The Appliance is meant for domestic use only.
- 8. The decision to repair or replacement of parts shall be at the sole discretion of the company. Unless the product part is non-repairable, replacement shall not be provided.
- 9. Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replace/repaired part.
- 10. Liability under terms of warranty is limited to the value of the repaires/replacement of the parts found to be defective with in the warranty period. All parts that would have to be replaced shall become the property of the company.
- 11. Under the terms of warranty, installation, free service will be provided only within the municipal limits of the cities/towns where the company has its branches or authorized representatives. Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time
- 12. The decision of the company is final and binding on all matters arising out of this warranty.
- 13. This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this the same shall be settled by an Arbitrator. In accordance with the provisions of Arbitration and conciliation Act, 1996.

WARRANTY CARD		
Model No. HH-100	Serial No	
C.M.No	Date of Sale	
Owner's Name & Address.		
Tested By	Remarks	
AUTHORIZED DEALER/FRANCHISEE		





www.maharajawhiteline.com

Follow us on : F You Tube V (i)

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE

Quality Control No. HP / 14 / 001 / 0081

Marketed by:

Groupe SEB India (P) Ltd.


C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

For customer feedback and complaints, please contact: Service Executive

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India Tel: 011-43684999, 011-33684999, e-mail: maharajacare@groupeseb.com

MAHARAJA -WHITELINE-

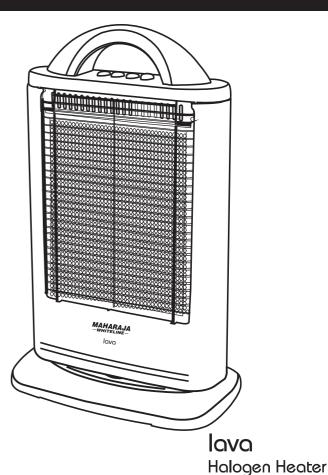

INSTRUCTION MANUAL

HALOGEN HEATER USAGE INSTRUCTIONS:

Please read this manual carefully before starting to use your halogen heater.

 
BRIEF INTRODUCTION OF THE PRODUCT:

The Halogen Heater of CG-FBG series adopts heating technology of remote infrared ray, it has a high heating efficiency, centralized heat and extensive usage. Also it has the function of swinging and turning of automatically. If the heater topples by accident, it can stop working automatically for safety reasons.

ASSEMBLE BEFORE YOU USE:


Please assemble the fountain and the body in the order given in the picture below:

- 1. Take two screws from the fountain bottom.
- 2. Place the heater on the flat desk or carton.
- 3. Let the electric wire and plug through the middle hole of the fountain, then fit fountain with body.
- 4. Let two screws through the fountain and screw them tightly.
- 5. Press the plug into the socket.



USAGE:

 
- 1. Please check following points before you use your Halogen heater
- A. The heating wire is not damaged
- B. Please do not use the socket lower than 230V/10A for fear of any accident.
- 2. Use the heater on the flat place. Do not put on an uneven place as the topple switch will be in an abnormal position and the heater will not work when it is turned on.
- 3. If you stop using heater, turn the power switch to the " " position, then turn off the plug.
- 4. If you want to move the heater, please turn off the power switch, then take out the plug, and hang on the handle on the back of the heater.




INSTRUCTIONS:

- 1. In order to avoid overheating, do not cover the heater.
- 2. Do not use the heater with a programmer timer or any other automatically device that switches the heater on.
- 3. (a) Fire guard of this heater is intend to prevent direct access to heating element & must be in place when heater is in use.
- (b) Fire guard does not give full protection for young children & for infirm person.
- 4. Do not use this heater in the immediate surrounding or a bath a shower or a swimming pool.
- 5. When appliances is install please see the picture in manual & follow the instruction sheet.
- 6. If supply cord is damaged it must be replaced by our services agent. (Service center) or similarly qualified person in order to avoid hazard.

 - 7. Strictly avoid to use the heater near the combustibles, explosive objects, things easy to be deformed or deteriorate, and area which is full of dust.
- 8. Strictly avoid to use the heater where it is easy to topple.
- 9. Strictly aviod to stem the small hole on the heater and insert anything into the machine. Especially for children for fear of shock.
- 10. When the heater topples or the topple switch is not working regularly for any reason, strictly avoid to push the topple switch forcibly.
- 11. Strictly avoid to use the heater in the place of rainfall.
- 12. Because the heater is heated by infrared ray, when used for a long time, the temperature of the things facing heating element will rise quickly, Strictly prohibit to place the heating side of the heater direct to the infant.
- 13. There is slight sound when turned on or off, which is normal due to the material expanding when heated and contract when cooled.
- 14. Strictly avoid to use the heater when it is covered.
- 15. Strictly avoid to plug-in or off the plug instead of turn on or off the power switch.
- 16. Do not locate the heater under or direct at the socket.
- 17. Strictly avoid to use the same socket with other big power appliance.
- 18. Please put off the plug when not in use.
- 19. If there is something wrong with heater, please turn off the machine, put off the plug immediately and send for repair to service center.
- 20. The heating wire used is treated by a special way, and has a long life, please do not use any other heating wire in place of it.
- 21. Strictly avoid to use or lengthened electric wire and movable socket.
- 22. For safe distance between heater and other furniture around, please refer the picture below:

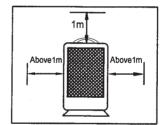



MAINTENANCE:

- 1. Please make sure to put off the plug before cleaning the heater.
- 2. Strictly prohibit to use water to wash the heater, It can be cleaned by a piece of soft damp cloth with a little natural detergent.. Please do not use other solvent like gasoline.
- 3. The machine must be used or stored after it has cooled and dried completely.
- 4. If stop using heater, please put off the plug from the socket, and store it in the dry place with a rustproof polybag, original packing is favoured.

PACKING LIST:

No.	NAME	QTY.
1	BODY OF HEATER	1PC
2.	FOUNTAIN	1PC
3	FIXED SCREW	2PC
4	INSTRUCTION MANUAL	1PC

TECHNICAL SPECIFICATION:

Power Supply : 230V 50Hz Ac Wattage : 1200W

3