


MAHARAJA —WHITELINE—

JUICER MIXER GRINDER

INSTRUCTION MANUAL

IDENTIFICATION OF REPRESENTATIVE PARTS

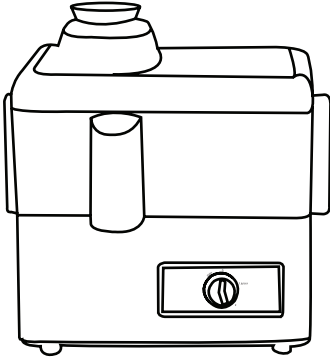

A1



A2



A3



A4*

MAXIMUM JAR CAPACITY

JAR	TYPES OF JAR	CAPACITY	WET CAPACITY (Rated) Max	DRY CAPACITY (Rated) Max.
A2	Wet Grinder (Liquidizer) Jar	1.5 L	0.6 L	NA
A3	Dry Grinder Jar	0.7 L	NA	0.3 L
A4	Multi mix (Chutney)	0.4 L	NA	0.2 L

A1- Basic Unit
Note: ** (Jars
Types) & * (Jar
Capacities) are
model specific

STANDARD RECIPES

S.NO	RECIPE QUANTITY	QUANTITY	TIME
1	Urad Dal*	175g+350ml water soaked for 8-12 hrs & add the water 50 ml	2 min
2	Urad Dal**	200g+400ml water soaked for 8-12 hrs & add the water 50 ml	2 min
3	Garam Masala	150 g assorted spices roasted & cooled	2 min
4	Wet masala	150g onion + 100g tomato	2 min
5	Ginger garlic paste	50g ginger + 50gm garlic	2 min
6	Milk shake	300ml milk + 50g ice cream(optional) + 30gm strawberry crush +sugar as per taste	3min
7	Tomato puree	250g medium sized tomatoes cut in 4 pieces	2 min
8	Lassi	250g curd +salt/sugar (As per test)+crushed ice	1 min

*For 450W / **For 550W

OPERATING SPEEDS:For Wet/Dry/Chutney grinding, use speed '1' for 30 seconds, thereafter use speed '2' till you finish grinding.

S.NO	FRUITS	QUANTITY
1	Water melon/ Sweetlime/ Orange(cut into small pieces)	250 g
2	Grapes	250 g
3	Tomatoes(For best results cut fruits into small pieces and begin juicing after adding 50 ml water)	250 g

Recommended quantities for juicing with fruit filter* (For juicing use speed 1)

* Model Specific

RECOMENDED QUANTITIES FOR JUICER

S.NO	FRUITS	QUANTITY
1	Carrots	1.5 Kg
2	Apples	2 Kg
3	Pineapples	1.5 Kg
4	Sweet Lime	1 Kg

Note: For obtaining maximum juice output, the above listed quantities of fruits can be juiced without cleaning the appliance in between batches. Fruits such as Mangoes, Papaya, Chickoo and similar should not be juiced in the centrifugal juicer. These fruits are recommended to be blended in the blender jar with the addition of water/milk.

GENERAL DECLARATIONS

- This appliance can be used safely for household use only.
- Before using this appliance, please give your special attention to the safety precautions and thoroughly clean the jars before first use

SAFETY PRECAUTIONS

- Place the appliance only on a flat, dry and stable surface.
- Keep the appliance away from sources of heat like gas or electric stoves.
- Make sure the voltage and the plug type are the same as your supply.
- The appliance is to be run only after assembling the jar unit and securing jar lid.
- Do not bend or put excessive pressure on the power cord or let the power cord hang over the edge of the table/slab or touch any hot surface.
- The appliance is not to be used if the power cord is damaged. Also, the power cord must be replaced by the manufacturer's service representative or similarly qualified person to avoid a hazard.
- Make sure the switch on the appliance is in the '0' position and each part is securely fit before operating it.
- Do not use the appliances if the rotating sieve is damaged.
- Use only crushed ice un the blender jar.

WARNING

- This appliance is not safe to be used by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be

- supervised to ensure they do not play with the appliance.
- Do not immerse the motor unit in water or try to clean the unit with running water as the motor unit, power cord, and plug should not encounter water/liquids
- The chutney jar is fixed with chutney blade permanently. Do not attempt to remove it.
- Do not move the appliance during operation.
- Do not open the lid until the rotation of the blade stops completely.
- Do not touch food in the jar by hand. Always use the spatula provided in the box.
- Never load the jar ingredients beyond the maximum indicated levels

OPERATING INSTRUCTIONS

- Ensure that all the blades are assembled on the jar.
- Care shall be taken when handling the sharp cutting blades, emptying jars and cleaning them.
- Switch off the appliance immediately when the motor stalls or you observe smoke coming from within.

JUICE EXTRACTION

For best results, follow the instructions below:

- Fruits or vegetables should be cut into small pieces to pass easily through feeder opening.
- Place any suitable glass or cup under spout for juice collection
- Switch on the machine and then put fruit or vegetable into the feeder opening
- The fruits and/or vegetables is completely crushed by the cutter. Juice and pulp are automatically separated. The transparent cover shows clearly

when it is time to empty the container.

- Switch off the machine by rotating the knob switch to "0"

OVERLOAD PROTECTION

- The appliance is fitted with a Circuit breaker protection /Overload protection to automatically shut off power mechanism to avoid motor damage on account of overloading.
- If the appliance stops due to overloading, then 'switch off' the Mixer and remove the excess load from the jar. Post-extraction of ingredients and pausing for 2-3 minutes; press the red toggle switch located at the bottom and restart.

CLEANING AND MAINTENANCE

- After usage, run the juicer mixer grinder with warm water and a small quantity of detergent along with blade to dislodge food particles sticking under the washer (steel cap).
- Do not immerse jar collar or base of the mixer in water.
- The appliance may be cleaned with damp cloth and mild nonabrasive cleaner to remove any spots. Dry with clean soft cloth.
- Do not use abrasive cleaners on jars.

TECHNICAL DATA *** (Info varies modelwise)

Wattage : 450W/ 550W
Power supply : 230 volts/50Hz, Ac
Speed : 2 speed with Pulse
Rating : 30 minutes (5 minutes ON/ 2 minutes OFF)

Note: ***Technical data mentioned is model specific.

WARRANTY TERMS AND CONDITIONS

Groupe SEB India (P) Ltd. ("Company") warrants to the purchaser of this Product a warranty commencing from the date of purchase and the Company will repair or replace free of charge any part or parts of the product, should the Company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only.

Warranty period is different for each model. Refer to the below table for model specific

warranty details:

PRODUCT/ MODEL	MOTOR WARRANTY	BODY WARRANTY
Montero	5 Yrs	2 Yrs
Easylock Dlx	5 Yrs	2 Yrs
Ultimate	5 Yrs	2 Yrs
Desire	2 Yrs	2 Yrs
Odacio Plus	2 Yrs	2 Yrs
Odacio Blue	2 Yrs	2 Yrs
Odacio	2 Yrs	1 Yrs
Gala	2 Yrs	1 Yrs
Cleo	2 Yrs	1 Yrs
Mark 1	2 Yrs	1 Yrs
Real Happiness	1 Yrs	1 Yrs
Royal Happiness	1 Yrs	1 Yrs

The warranty will be governed by the following clauses:

This warranty is valid only if this card is duly signed and stamped by our dealer and is produced along with the original customer's copy of the purchase bill. Warranty period starts from the date of purchase from our authorized dealer only.

The Appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual. The Appliance should not be repaired, tampered or altered by any agency or person other than an authorized company personnel or their service centers.

The Appliances subject to normal wear & tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not covered by this warranty. Plastic Parts, which are breakable, are not covered under this warranty.

The Appliance is meant for domestic use only.

The decision to repair or replacement of parts shall be at the sole discretion of

the company. Unless the product part is non-repairable, replacement shall not be provided.

Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replace/ repaired part.

Liability under terms of warranty is limited to the value of the repaired/ replacement of the parts found to be defective within the warranty period. All parts that would have to be replaced shall become the property of the company.

The warranty shall not apply to replacement parts such as Carbon Brushes, Lid, Rubber Ring, Coupler, Shaft Blade, Bush Handle & Main Cords. The customer is responsible for bringing the defective product to the service centre/ manufacturer for servicing &

collecting the same at his/ her own cost. Under the terms of warranty, installation, free service will be provided only within the municipal limits of the cities/towns where the company has its branches or authorized representatives. Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time to time.

The decision of the company is final and binding on all matters arising out of this warranty.

This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this the same shall be settled by an Arbitrator, In accordance with the provisions of Arbitration and conciliation Act, 1996.

WARRANTY CARD

Model No:..... Serial No:.....
C.M.No:..... Date of Sale:.....
Tested By:..... Remarks:.....

AUTHORIZED DEALER/ FRANCHISEE

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES IS AVAILABLE WITH SERVICE FRANCHISEE

Manufactured and Marketed by:
Groupe SEB India (P) Ltd. Village Malkumajra, Paragna-Dharampur, Baddi Nalagarh Road, Dist. Solan (Himachal Pradesh) INDIA -173205

FOR CUSTOMER FEEDBACK AND COMPLAINTS, PLEASE CONTACT:

Service Executive: Groupe SEB India (P) Ltd.
C-67, 3rd Floor, DDA Sheds, Okhla Phase1,
New Delhi-110020, India
Tel: 011- 43684999, 011- 3368-4999
e-mail: maharajacare@groupeseb.com

Bis Website:- <http://www.bis.gov.in>



MAHARAJA
SERVICE APP



www.maharajawhiteline.com