

## WARRANTY TERMS AND CONDITIONS

Groupe SEB India (P) Ltd. ("Company") warrants to the purchaser of this Product that for a period of 1 years on product commencing from the date of purchase, the Company will repair or replace free of charge any part or parts of the product, should the Company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only. The warranty will be governed by the following clauses:

1. This warranty is valid only if this card is duly signed and stamped by our dealer and is produced along with the original customer's copy of the purchase bill.
2. Warranty period starts from the date of purchase from our authorized dealer only.
3. The Appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
4. The Appliance should not be repaired, tampered or altered by any agency or person other than an authorized company personnel or their service centers.
5. The Appliances subject to normal wear & tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not covered by this warranty.
6. Plastic Parts, which are breakable, are not covered under this warranty.
7. The Appliance is meant for domestic use only.
8. The decision to repair or replacement of parts shall be at the sole discretion of the company. Unless the product part is non-repairable, replacement shall not be provided.
9. Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replace/repaired part.
10. Liability under terms of warranty is limited to the value of the repairs/replacement of the parts found to be defective within the warranty period. All parts that would have to be replaced shall become the property of the company.
11. Under the terms of warranty, installation, free service will be provided only within the municipal limits of the cities/towns where the company has its branches or authorized representatives. Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time to time.
12. The decision of the company is final and binding on all matters arising out of this warranty.
13. This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this the same shall be settled by an Arbitrator, In accordance with the provisions of Arbitration and conciliation Act, 1996.

### WARRANTY CARD

Model No. RH-105 Serial No. ....

C.M.No. .... Date of Sale. ....

Owner's Name & Address. ....

Tested By. .... Remarks. ....

AUTHORIZED DEALER/FRANCHISEE



MAHARAJA  
SERVICE APP



ISO 9001:2015  
Certified Company

[www.maharajawhiteline.com](http://www.maharajawhiteline.com)

Follow us on :

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE

### Marketed by:

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

For customer feedback and complaints, please contact:

Service Executive

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India


Tel : 011-43684999, 011-33684999, e-mail : [maharajacare@groupeseb.com](mailto:maharajacare@groupeseb.com)

# MAHARAJA — WHITELINE —



flare 2000 T  
Heat Convectore

## INSTRUCTION MANUAL

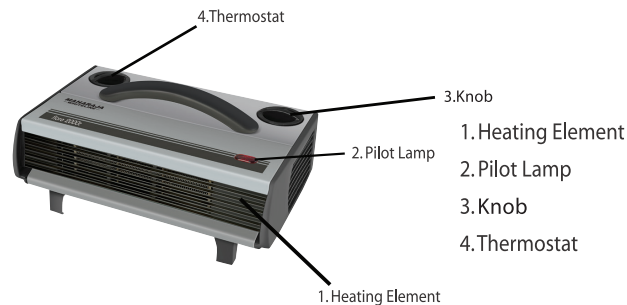

#### FOR YOUR OWN SAFETY

1. Read all instruction before using the heat convector.
2. Only connect the heat convector to a single-phase socket with a main voltage as specified on the rating plate.
3. Do not leave your home while the appliance is in function: ensure that the switch is in OFF (0) position and the thermostat is in minimum position. Always unplug the appliance.
4. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 100 cm away from the fan heater.
5. If wall mounted do not fix to combustible material such as wooden, synthetic or plastic surface. Do not hang anything on or in front of the fan heater.
6. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
7. Keep the air inlet and outlet free from objects: at least 1 m in front and 50 cm behind the heater.
8. Do not install the heater right below a socket.
9. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C, or 176 F).
10. Do not cover. If covered, there is the risk of overheating.
11. Do not use this heat convector in the immediate surroundings of a bath, a shower or a swimming pool.
12. Do not use the heat convector in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
13. If the cord of the appliance is damaged discontinue use of this product and contact your retailer for further instructions.
14. Keep the heat convector clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.

#### INSTALLATION

The appliance requires no installation, it should be used solely as a portable appliance. Portable appliances are not suitable for use in a bathroom.

#### TECHNICAL SPECIFICATIONS

Model no.	RH-105
Power supply	230v 50hz ac
Wattage	2000 w

#### OPERATION

- Turn the thermost knob in a clockwise direction until it reaches the maximum setting.
- Summer service (ventilation only) : turn the knob to setting.
- Heating at reduced power : turn the knob (right) to setting I (1000W).
- Heating at full power : turn the knob (right) to setting II (2000W).
- Switching off : turn the knob (left) to setting.

#### REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the thermostat knob In an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically and kept at a constant level by the thermostat.

#### CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.

Clean the air inlet/outlet grilles frequently.

Never use abrasive powders or solvents.

#### WARNINGS

- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- When the appliance is used in portable version, do not place it up against walls, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls can not be reached by persons using the bath tub or the shower.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance in rooms less than 4sqm area.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.