

 
back

front

15. Any claim must be filed with in the warranty period. File a claim, the first end must present the copy of the warranty card along with original purchase receipt showing the purchase and/or delivery date and the product identification to the service centre listed in the service centre directory

WARRANTY CARD	
Model No. SM-104	
Serial No.	
C.M.No.	Date of Sale.
Owner's Name and Address.....	
Tested By. Remarks.	
AUTHORIZED DEALER/FRANCHISEE	

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE

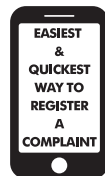

MAHARAJA SERVICE APP

www.maharajawhiteline.com

Follow us on :

Imported by:
Groupe SEB India (P) Ltd.
C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

For customer feedback and complaints, please contact:
Service Executive
Groupe SEB India (P) Ltd.
C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India
Tel : 011-43684999, 011-33684999, e-mail : maharajacare@groupeseb.com


*'Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.

MAHARAJA[®]
—WHITELINE—



viva plus
Sandwich Maker

INSTRUCTION MANUAL

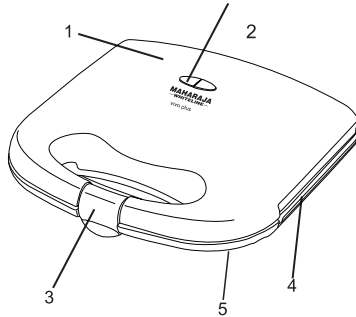PART DESCRIPTION

1. Upper Body
2. Light Indicator
3. Lock
4. Plates
5. Base

SAFETY INSTRUCTIONS

- 1 Before commissioning this device please read the instruction manual carefully.
- 2 Please keep these instructions, the warranty certificate, the sales receipt and, if possible the carton with the inner packaging.
- 3 The device is intended exclusively for private use and not for commercial use.
- 4 Always switch off the device and remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Pull on the plug, not on the cable.
- 5 In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
- 6 Test the device and the cable regularly for damage. If there is damage of any kind, the device should not be used.
- 7 Do not repair the device yourself, take it to the nearest authorised service station.
- 8 Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges etc.
- 9 Do not use the device outdoors.
- 10 Under no circumstances must the device be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- 11 If the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into the water.
- 12 Use the device only for the intended purpose.

SPECIAL SAFETY NOTES

- 1 The baking surfaces get very hot. Touch the handles only.
- 2 Put the unit down onto a heat-resistant surface or mat.
- 3 In order to prevent heat from building up, do not put the device directly underneath a cupboard. Ensure that there is enough space all around.
- 4 Beware of steam coming out when you open the baking section.
- 5 Never use the toaster near or below curtains and other inflammable materials.
- 6 A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.
- 7 If the supply cord is damaged. It must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 8 Do not immerse the appliance in any liquid.
- 9 The temperature of accessible surfaces may be high when the appliance is operating.
- 10 Charcoal or similar combustible fuels must not be used with this appliance.

STARTUP UNIT**1 NON-STICK COATING**

- 1 Lightly grease the baking surfaces before the unit is used for the first time. Use the appliance for about 10 minutes with the toasting surfaces closed (see "using the unit"). Then wipe it down with a damp cloth.
- 2 Please do not eat the first piece of toast you make.

USING THE UNIT

- 1 Put the plug into an earthed 230V, 50HZ mains socket, the power is 750W. The red Neon (POWER) lights up.
- 2 Keep the baking unit closed during the warm-up time.
- 3 Open the cover and place the ingredients. Then close the lid gently and lock the handle. The sandwich will be baked within 5 minutes.
- 4 Open the lid and remove the slices of sandwich with a wooden fork. Do not use pointed or sharp objects to avoid damaging the coating of the baking surface.
- 5 The baking section should always be closed in the intervals between baking.

CLEANING & MAINTENANCE

- 1 Pull out the mains plug and allow the unit to cool down.
- 2 Brush away remains of crumbs from the baking surfaces.
- 3 Clean the appliance with a slightly damp cloth only.
- 4 Do not use abrasive detergents.

WARRANTY TERMS AND CONDITIONS

The Company offers One-year warranty for repairing or replacing parts, of cost against defect in manufacturing functional part subject to the following terms and conditions.

1. This warranty is valid only if this card is duly signed and stamped by our dealer and is produced along with the original customer's copy of the purchase bill.
2. Warranty period starts from the date of purchase of product.
3. The Appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
4. The Appliance should not be repaired, tampered or altered by any agency or person other than an authorised company personnel or their service centers.
5. The warranty shall not apply to replacement parts.
6. Plastic and glass parts, which are breakable, are not covered under this warranty.
7. The Appliances subject to normal wear & tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not covered by this warranty.
8. The customer is responsible for bringing the defective product to the service centre/manufacture for servicing and collecting the same at his/her own cost.
9. The Appliance is meant for domestic use only.
10. Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replaced/repared part.
11. Liability under terms of warranty is limited to the value of the repairs/replacement of the parts found to be defective with in the warranty period. All parts may have been replaced shall become the property of the company.
12. Under the terms of warranty, installation, free service will be provided only within the municipal limits of the cities/towns where the company has its branches or authorized representatives. Service outside the municipal limits specified above will be provided after charging the actual to and fro travelling and incidental expenses, as prevailing from time to time.
13. The decision of the company is final and binding on all matters arising out of this warranty.
14. This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this may/can be settled by an Arbitrator. In accordance with the provisions of Arbitration and conciliation Act, 1996.