

Size 11cm x 17 cm



**MAHARAJA  
SERVICE APP**

[www.maharajawhiteline.com](http://www.maharajawhiteline.com)

Follow us on :    

**Marketed by:**

Groupe SEB India (P) Ltd.  
C-67, 3rd Floor,  
DDA Sheds, Okhla Phase1, New Delhi-110020, India


**Quality Control No. HP / 14 / 001 / 0081**

**For customer feedback and complaints,  
please contact:**

**Service Executive :**


Groupe SEB India (P) Ltd.  
C-67, 3rd Floor,  
DDA Sheds, Okhla Phase1, New Delhi-110020, India  
Tel : 011-43684999,011-33684999, e-mail:maharajacare@groupeseb.com

**MAHARAJA**  
**— WHITELINE —**

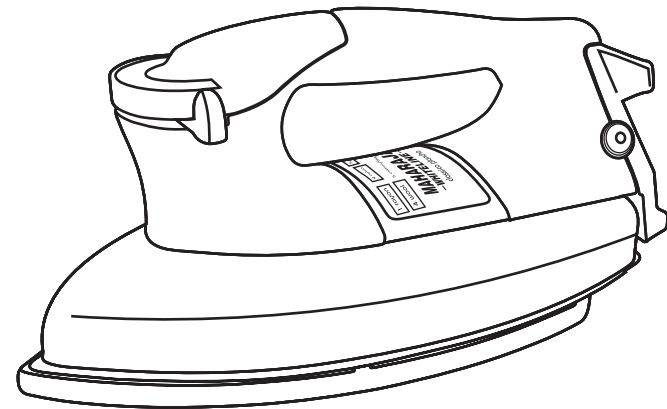

**classico plancha**  
**Dry Iron**

**INSTRUCTION MANUAL**

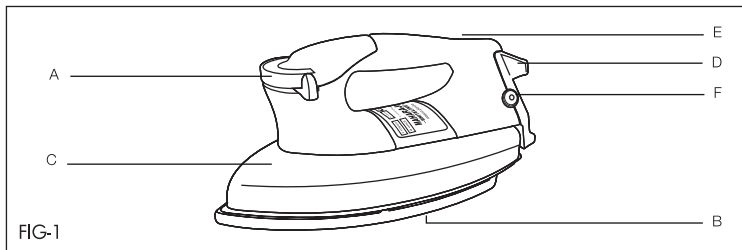

#### TECHNICAL SPECIFICATIONS:


- Wattage: 1200 watts, 240 V AC, 50 Hz, 1 Phase
- Unique temperature control with label
- Unique heel rest
- Chrome plated stainless steel cover
- Cotton braided power cord
- High efficiency heavy weight base with power indicator
- Elegant futuristic body
- Designed for easy ironing of heavy curtains and bed sheets

#### IMPORTANT:

- Please read these instructions before use and view the illustrations before using the iron.
- Check if the voltage rating on the typeplate corresponds to the mains voltage in your home. Should this not be the case, then check with your dealer.
- Never use the iron if it is damaged in any way.
- Always switch the iron off when leaving, even when only for a short while. Remove the plug from the socket and keep the iron upright.
- Please ensure children do not touch the iron when hot and that they do not pull the main cord.
- Never immerse the iron in water.
- If the iron does not function properly despite you having followed these instructions, have it checked immediately by our dealer or at your nearest Maharaja Whiteline authorised service centre.
- Take care that the mains cord does not touch the base when hot.

#### GENERAL DESCRIPTION

- (A) Unique temperature control with label
- (B) Golden soleplate for easy gliding
- (C) Chrome plated stainless steel cover
- (D) Unique heel rest
- (E) Cotton braided power cord
- (F) Power indicator

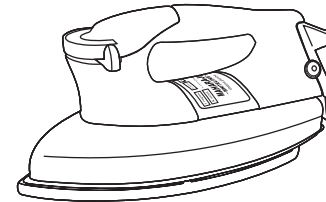

#### TIPS

- Some parts of the iron have been slightly greased and as a result the iron might emit smoke when switched on for the first time. After a short while, this will cease.
- Before using the iron for the first time remove any sticker or protective foil from the base and clean the base with a soft cloth.
- Keep the base smooth and do not scratch against metal object (e.g. rack of ironing board, buttons zippers.)
- The ironing results are best if the cloth is slightly damp.
- Velvet and other texture which rapidly acquire shiny spots should be ironed with light pressure in one direction only.
- Always keep the iron moving.
- Below are some ways to help you iron:
  - Iron with a straight back. Adjust the ironing board to the correct height.
  - Use the iron's own speed: when in motion, all you need to do is steer the iron.
  - Pressing and pushing the iron is not necessary provided temperature has been set correctly and the cloth is slightly damp

#### SETTING THE TEMPERATURE

- Always check first to see whether ironing instructions are attached to the articles to be ironed. They can be found on a label showing the drawing of an iron. The number of marks indicates the correct temperature (Refer to the indications on the temperature control.)
- Follow these instructions in all cases:
  - If ironing instructions are missing but you know the kind of fabric, adjust the temperature with the temperature control indicator built with the handle & refer to the label on the body of the iron. This is valid for the actual materials and does not concern any applied finish, glass etc.
  - Clothes to which some kind of finish has been applied (gloss, wrinkle relief etc.) can best be ironed at a relatively lower temperature.
  - If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature of the composition. (E.g. an article consisting of "60% polyester and 40% cotton" should be ironed at the temperature indicated for the polyesters)

- Sort the fabrics out according to ironing temperature first – wool with wool, cotton with cotton etc.
- The iron heats up faster than it cools down. Therefore, start ironing the articles requiring the lowest temperature such as those made of synthetic fibres. Then progress to the higher ones.
- If you do know by what kind(s) of fabric(s) the article has been made of, find a spot which will be invisible when wearing an article. Try to find out the ironing temperature which is most suitable there.(start at relatively low temperature)

**STORING**

- Before storing let the iron cool down sufficiently. (standing on its heel)
- Wind the mains cord around it.
- Store the iron on its heel to prevent damage to the base.

**CLEANING**

- Before cleaning remove the plug from the mains outlet and allow the iron to cool down sufficiently.
- You can wipe the iron with a damp cloth, if required with some detergent. Do not use scouring or abrasive cleaning agents like alcohol, spirit, kerosene, nail polish remover etc.
- Never immerse the iron in water
  - Set the temperature control (A) to the correct ironing temperature adjusting with the indicator on the handle & label on the iron or the ironing
  - Insert the plug into the mains outlet and place the iron on its rear side
  - After the power indicator light (F) goes out and comes on again you may start ironing
  - The power indicator (F) light will come on from time to time during ironing. This has no effect on the ironing, so simply continue.
- Classico Plancha has a high efficiency, chrome plated, smooth base. This coating is for preventing the cloth from sticking to the base in case the temperature is wrongly set to a higher level. Ensure not to scratch the base while ironing (on a metal button or zip). Clean the base with a damp cloth only. Never use a knife, blade or similar sharp objects to clean the base.

**WARRANTY**

This Maharaja Whiteline product is warranted for two years from the date of sale against any manufacturing defect, provided the defective product or the component is delivered/returned to us or to our nearest Dealer/Distributor/Wholesaler, freight paid. Our liability shall be maximum to the cost of rectifying the defects or the price paid for the product (whichever is less) and we shall not be liable for any other indirect or consequential damage. This warranty is not valid if:

- The fault or damage is caused due to consumer’s ignorance, mishandling, negligence, incorrect connection, misapplication, voltage fluctuations, accidental or general wear and tear.
- If the product is not purchased from an authorised Maharaja Whiteline Dealer/Retailer.
- The product is opened or handled by any unauthorised person.
- The serial number of the product is missing, deleted, or altered.
- The product or the component is not properly packed while returning to avoid damage in transit.

**WARRANTY CARD**

**Model No. DI-126**

**Serial No. ....**

**C.M.No. .... Date of Sale. ....**

**Owner’s Name and Address. ....**

.....

.....

**Tested By. .... Remarks. ....**

**AUTHORIZED DEALER/FRANCHISEE**

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE