

- 4) Violation of any warranty terms and conditions mentioned above.
- 5) The warranty doesn't apply to:
 - a) Main Cord
 - b) Normal wear and tear of the products and parts
 - c) Scratches or discoloration on the heating plates and body
 - d) Damages resulting from accidents, mishandling, improper usage, negligence on the part of consumer
 - e) Fluctuation in the supply voltage or usage of any power supply other than as specified on the Box
 - f) Compliant not registered at the Customer care centre of the Company by way of phone call, email or service app within the warranty period.

WARRANTY CARD	
Model No. SM-205 <input type="checkbox"/>	SM-206 <input type="checkbox"/>
Serial No.	
C.M.No.	Date of Sale.
Owner's Name and Address.....	
Tested By. Remarks.	
AUTHORIZED DEALER/FRANCHISEE	

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE



www.maharajawhiteline.com

Follow us on:

Marketed By: Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

For customer feedback and complaints, please contact:

Service Executive

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

☎ 011- 43684999 📠 8860555777

✉ maharajacare@groupeseb.com

'Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.

MAHARAJA[®]

— WHITELINE —



Aprica Plus Toast Plates
Aprica Grill Plates

750W
Sandwich Maker

INSTRUCTION MANUAL

PART DESCRIPTION:



1. Red Light (Power On)
2. Green Light (Ready Indicator)
3. Lock
4. Upper Cover
5. Bottom Cover

XL Toast Plates

XL Grill Plates

SPECIFICATIONS:

POWER SUPPLY	: 230V, 50Hz AC WITH EARTHING
WATTAGE	: 750W
TEMPERATURE CONTROL	: PRESET THERMOSTAT
PRODUCT COLOUR	: BLACK

IMPORTANT SAFE GAURD:

1. Ensure that earthing connection in your house wiring is proper.
2. Do not touch hot surfaces. Use handle.
3. To protect against risk of electric shock, do not immerse cord, plug or cooking unit in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
5. Unplug from power supply when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning Toaster.
6. Do not operate Toaster with a damaged cord or plug or after Toaster malfunction or is dropped or damaged in any manner. Bring it to the nearest authorized service facility for examination & repair.
7. The use of accessory attachment, which is not recommended, may cause hazards.
8. Do not place on or near hot gas or electric burner, or in a heated oven.
9. This Toaster is for domestic use and intended for house hold use only.

HOW TO USE:

1. Plug cord into wall socket, red light will glow. Allow toaster to preheat for about 5 minutes.
2. Open toaster fully. Place prepared sandwiches of bread in bottom half with buttered side facing top.
3. Carefully close two parts of toaster together. Steam will be ejected from between the plates. Care must be taken to ensure that fingers do not get in contact with same.
4. Your sandwich will be toasted in 2-3 minutes approximately, Green light will glow. However you may cook for more time if you need extra browning.
5. Open toaster and remove sandwich using a wooden spatula. Never use a metal knife as this may damage non-stick coating.
6. Close lid to preserve heat until next sandwich is ready to toast.
7. After use, remove plug from wall socket.

CARE AND MAINTENANCE:

No other maintenance or servicing of this appliance is required than mentioned here. Repairs should be performed by qualified personnel only.

1. Switch off mains and unplug from mains before cleaning the unit every time.
2. After use and before cleaning, remove plug and wait for the toaster to cool
3. Wipe the inside and edges of platen with kitchen roll, absorbent paper toweling or a soft cloth.
4. Should any filling be difficult to remove, pour a little cooking oil onto plater and wipe it off after 5 minutes when filling is soft end.
5. Wipe outside with a slightly moistened cloth ensuring that no moisture, oil or grease enters cooling slots.
6. Do not clean inside or outside with any abrasive scotchling pad or steel wool as this will damage finish.
7. Do not immerse unit in water, liquid or hold it under running water.

TOASTING TIPS:

1. Always preheat before use.
2. Flavored butters may also be used.
3. Suggested garnishes for sandwich; lettuce, parsley, mint, cress, stuffed olive halves, onion, tomato etc.
4. A teaspoon of sugar sprinkled on the outside makes toasted sandwiches crisper (especially with fruit Filling).

WARRANTY TERMS AND CONDITIONS:

GROUPE SEB INDIA PVT LIMITED ("Company") warrants that the Company shall rectify any manufacturing defect in the Sandwich Maker ("Product"), carry out such repair/replacement (as the case may be) free of charge during the warranty period of 1 (one) year. The Company shall in no event be replacing the product as a part of warranty unless and until there is an irreparable manufacturing defect in the product as decided by the technical team of the Company. The period of availing warranty shall commence from the date of purchase as mentioned on the valid tax invoice or on Warranty card duly filled, signed & stamped by authorised dealer of the Company. The Company is not required to provide any services pertaining to the product after the expiry of said warranty period.

TERMS AND CONDITIONS OF WARRANTY:

1. This warranty shall be valid only if the product shall be used only as per the guidelines provided in this instruction manual. The product is to be used only for domestic purpose and not for any commercial, rental or profit generating activities.
2. This warranty can only be availed by the first purchaser of the product and is not transferable and non-assignable.
3. The Customer is required to register the complaint with the Customer Care Centre of the Company by way of phone call, email or WhatsApp Chatbot.
4. The customer must present the valid warranty card or the valid tax invoice as a pre-condition before available the warranty for the product as well as any related spares in the absence of which the Company may refuse to provide any warranty services.
5. Any repair or replacement done on the Product or any parts of the product during the warranty period, will in no event extend the Warranty period. The Warranty period is limited as provided herein, irrespective of the period of the product was not in use, was not giving proper performance, was under breakdown or was under repair by Company's authorised service centre.
6. The Company/its Authorised Service Centre reserves the right to retain any part/component/product replaced. The Company shall have exclusive right to replace the defective/unserviceable parts with the parts which may be new or refurbished free of charge during the warranty period.
7. Any repair or replacement carried out on the product or any part thereof by anyone other than authorised service centre, shall make this warranty void.
8. The Company shall provide Door-step service during the Warranty period. However, if the Product is located outside the municipal limits and serviceable area of Company's Authorised Service Centre, in such rare event the Company may refuse to provide Door-Step service and the Customer shall be required to bring the Product at the designated Service Centre of the Company or some other location within the municipal limits, at its own cost and expenses.
9. In case of any doubt regarding any conditions mentioned on this warranty card, including but not limited to authenticity of the Product, tax invoice, warranty card, part of the product etc, the decision of the Company shall be final and binding on the Customer.
10. The warranty is issued at New Delhi and courts at New Delhi shall have sole jurisdiction over matters covered or flowing from this warranty.
11. The Company shall not be liable for any indirect, special, consequential, special, incidental, punitive, exemplary or economic damage or loss. The Company's liability under or in relation to this warranty shall be limited to the purchase price paid by the Customer as per valid tax invoice.

THIS WARRANTY IS NOT APPLICABLE IN ANY OF THE FOLLOWING CASES:

- 1) The signed & stamped warranty card or the tax invoice is not presented to the service personnel at the time of claiming or availing the warranty.
- 2) The product installation, use or maintenance is not done as per the instructions given in this instruction manual or as per common sense/understanding of usage of Sandwich Maker for such actions which are not specifically stated in this Instruction Manual.
- 3) If the original serial number of the Product is removed, tempered or altered.