

**WARRANTY CARD**

**Model No.** OTG-103  **Serial No.** .....

OTG-104

OTG-105

**C.M.No.** ..... **Date of Sale.** .....

**Owner's Name & Address.** .....

.....

.....

**Tested By.** ..... **Remarks.** .....

**AUTHORIZED DEALER/FRANCHISEE**

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE



**MAHARAJA**  
**WhatsApp**  
Easy & Quickest Way to  
Register a Complaint

[www.maharajawhiteline.com](http://www.maharajawhiteline.com)

Follow us on:

**Marketed by:**

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

**For customer feedback and complaints, please contact:**

**Service Executive**

Groupe SEB India (P) Ltd.


C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

Tel : 011-43684999, : 8860555777

e-mail : [maharajacare@groupeseb.com](mailto:maharajacare@groupeseb.com)

'Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.

**MAHARAJA<sup>®</sup>**  
**— WHITELINE —**

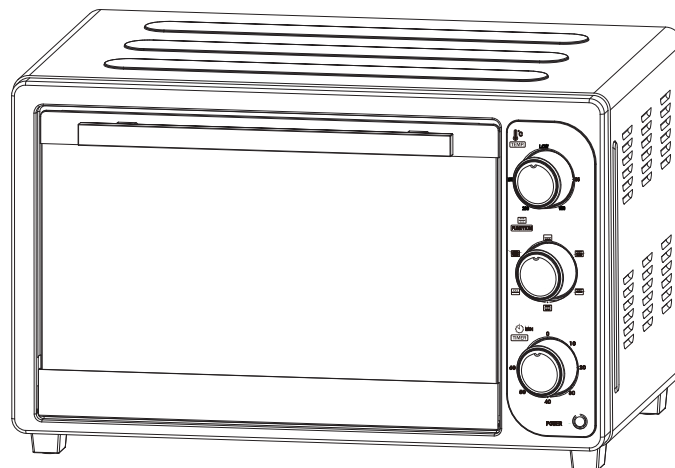

**Oven Toaster Griller**

**CONTIGO 45L**  
1800W

**CONTIGO 35L**  
1500W

**CONTIGO 28L**  
1500W

**INSTRUCTION MANUAL**

## FOR HOUSEHOLD USE ONLY

### IMPORTANT SAFEGUARDS:

When using electric appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven, or in a microwave oven.
9. When operating the oven, keep at least 12 cm of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use, or before cleaning. Let it to cool down before putting on or taking off parts, or before cleaning.
11. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
12. Extreme caution should be exercised when removing tray or disposing of hot grease or other hot liquids.
13. Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts, and endanger a risk of electric shock.
14. A fire may occur if the oven is covered by or placed near the flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. To disconnect, turn any control to "off", then remove plug from wall outlet. Always hold the plug, but never pull the cord.
19. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
20. Do not use outdoors.
21. Do not use appliance for other than intended use.
22. This appliance is for HOUSEHOLD USE ONLY.
23. The accessible surfaces are liable to get hot when the appliance is operating.
24. Glass Door cannot support goods in the fully open position.
25. The appliance is not intended to be controlled by an external timer or separate remote-control system.
26. Caution, hot surface! The temperature of accessible surface may be high when the appliance is operation. Do not touch hot surfaces. Use handle or knobs.
27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
28. Children should be supervised to ensure that they do not play with the appliance.
29. For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.
30. Rear surface of appliances should be placed against a wall.

### SAVE THESE INSTRUCTIONS:

**Before using your cooker for the first time, be sure to:**

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and Timer Knob is in the "0" position.
3. Remove all racks and pans. Wash the racks and pans in hot sudsy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new cooker.


**When begin to use:**

1. Confirm the marked power consumption is in conformity with your household electric power.
2. Do not let cord hang over edge of table or counter to avoid cases that children may stumble over.
3. If the supply cord is damaged, the oven should not be used before it is repaired.
4. Oven should be sent to the manufacturer, authorized service agent or a similarly qualified person to repair in order to avoid a hazard.

**This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:**

1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or table top where they can be pulled on by children or tripped over accidentally.

### GETTING TO KNOW YOUR OVEN:

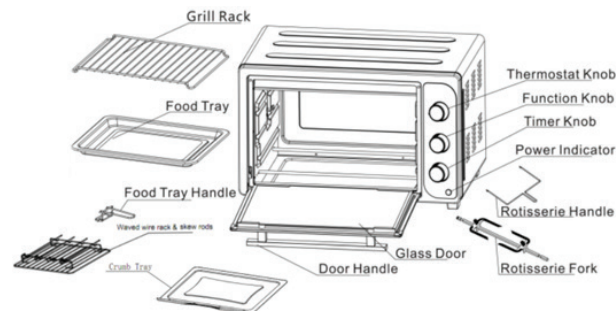

- Grill Rack:** For toasting, baking, and general cooking in casserole dishes and loading food tray.
- Food Tray:** For use in broiling and roasting various foods that contain water or will release water or oil during cooking.
- Food Tray Handle:** Allows you to pick up Food Tray and Grill Rack to avoid any scald.
- Rotisserie Fork (inserted with the rotisserie rod to use):** Can roast up a 3-pound meat or chicken.
- Rotisserie Handle:** Use for removing hot Rotisserie Fork (along with the rotisserie rod) from inside the oven.
- Crumb Tray:** Use for holding food scraps or dripping fluid.
- Waved Wire Rack & Skew Rods:** For toasting meat cube.

### OPERATION INSTRUCTION:

**Using Your Oven:**

1. Place the food on grill rack or Food tray and close the oven door.
  - a. Do not use any paper or plastic container.
  - b. Use Food tray for any food that is small in size or likely to drip while cooking.
  - c. Place the food evenly on the grill rack.
2. Insert the power plug into the socket.
3. Set the desired cooking function, temperature & timer.
4. When cooking finished, turn the Timer knob to "0" position.
5. Remove the power plug from the socket after cooking.

**Note: The weight of the food which is put on the Food Tray/Grill Rack cannot be over 3.5kg. (Just for reference) (The food cannot concentrate on one side of the Food Tray/Grill Rack, you would better try you best to make the food put on the Food Tray/Grill Rack evenly).**

## CARE & CLEANING:

**ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING**

### MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

Warning! Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

### CLEANING:

To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid. The exterior surface of the appliance should be cleaned with a clean damp cloth only.

The oven features a Quick-Clean internal coating. If desired, wipe walls with damp cloth moistened with mild detergent.

Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door with a clean damp cloth, and dry with a paper or cloth towel. Clean exterior with damp cloth.

**DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE. ALWAYS UNPLUG THE OVEN AND ALLOW IT COOLING BEFORE CLEANING. DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING!**

Technical Specification			
Model No.	103	104	105
Capacity	28L	35L	45L
Power supply	230 V,50 Hz, AC		
Rated Power	1500W	1500W	1800W

## WARRANTY:

GROUPE SEB INDIA PVT LIMITED ("Company") warrants that the Company shall rectify any manufacturing defect in the OTG ("Product"), carry out such repair/replacement (as the case may be) free of charge during the warranty period of 2 (two) years. The Company shall in no event be replacing the product as a part of warranty unless and until there is an irreparable manufacturing defect in the product as decided by the technical team of the Company. The period of availing warranty shall commence from the date of purchase as mentioned on the valid tax invoice or on Warranty card duly filled, signed & stamped by authorised dealer of the Company. The Company is not required to provide any services pertaining to the product after the expiry of said warranty period.

### TERMS AND CONDITIONS OF WARRANTY:

1. This warranty shall be valid only if the product shall be used only as per the guidelines provided in this instruction manual. The product is to be used only for domestic purpose and not for any commercial, rental or profit generating activities.
2. This warranty can only be availed by the first purchaser of the product and is not transferable and non-assignable.
3. The Customer is required to register the complaint with the Customer Care Centre of the Company by way of phone call, email or WhatsApp Chatbot.

4. The customer must present the valid warranty card or the valid tax invoice as a pre-condition before available the warranty for the product as well as any related spares in the absence of which the Company may refuse to provide any warranty services.
5. Any repair or replacement done on the Product or any parts of the product during the warranty period, will in no event extend the Warranty period. The Warranty period is limited as provided herein, irrespective of the period of the product was not in use, was not giving proper performance, was under breakdown or was under repair by Company's authorised service centre.
6. The Company/its Authorised Service Centre reserves the right to retain any part/ component/product replaced. The Company shall have exclusive right to replace the defective/unserviceable parts with the parts which may be new or refurbished free of charge during the warranty period.
7. Any repair or replacement carried out on the product or any part thereof by anyone other than authorised service centre, shall make this warranty void.
8. The Company shall provide Door-step service during the Warranty period. However, if the Product is located outside the municipal limits and serviceable area of Company's Authorised Service Centre, in such rare event the Company may refuse to provide Door-Step service and the Customer shall be required to bring the Product at the designated Service Centre of the Company or some other location within the municipal limits, at its own cost and expenses.
9. In case of any doubt regarding any conditions mentioned on this warranty card, including but not limited to authenticity of the Product, tax invoice, warranty card, part of the product etc, the decision of the Company shall be final and binding on the Customer.
10. The warranty is issued at New Delhi and courts at New Delhi shall have sole jurisdiction over matters covered or flowing from this warranty.
11. The Company shall not be liable for any indirect, special, consequential, special, incidental, punitive, exemplary or economical damage or loss. The Company's liability under or in relation to this warranty shall be limited to the purchase price paid by the Customer as per valid tax invoice.

### THIS WARRANTY IS NOT APPLICABLE IN ANY OF THE FOLLOWING CASES:

- 1) The signed & stamped warranty card or the tax invoice is not presented to the service personnel at the time of claiming or availing the warranty.
- 2) The product installation, use or maintenance is not done as per the instructions given in this instruction manual or as per common sense/understanding of usage of OTG for such actions which are not specifically stated in this Instruction Manual.
- 3) If the original serial number of the Product is removed, tempered or altered.
- 4) Violation of any warranty terms and conditions mentioned above.
- 5) The warranty doesn't apply to:
  - a) Main Cord
  - b) Normal wear and tear of the products.
  - c) Scratches, breakage or discoloration on the Glass and Plastic parts.
  - d) Damages resulting from accidents, mishandling, improper usage, negligence on the part of consumer.
  - e) Fluctuation in the supply voltage or usage of any power supply other than as specified on the Box.
  - f) Compliant not registered at the Customer care centre of the Company by way of phone call, email or WhatsApp Chatbot within the warranty period.

## WEE / ENVIRONMENTAL PROTECTION:



### Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority.

Improper disposal may be harmful to the environment