

Size 11cm x 17 cm

WARRANTY CARD

Model No GS-130 Serial No.
 GS-131

 
C.M.No. Date of Sale.

Owner's Name & Address.
.....
.....

Tested By. Remarks.

AUTHORIZED DEALER/FRANCHISEE

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE



MAHARAJA SERVICE APP

www.maharajawhiteline.com

Follow us on:

Marketed by:

Groupe SEB India (P) Ltd.

C-67, 3rd Floor,

DDA Sheds, Okhla Phase1, New Delhi-110020, India

For customer feedback and complaints, please contact:

Service Executive :

Groupe SEB India (P) Ltd.

C-67, 3rd Floor,

DDA Sheds, Okhla Phase1, New Delhi-110020, India

Tel : 011-43684999, 8860555777

e-mail:maharajacare@groupeseb.com

 
IS:4246




CM/L-9600013911

*'Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.

MAHARAJA[®]
—WHITELINE—

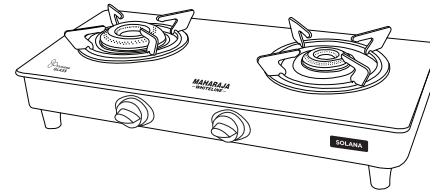

2 Burner Gas Cooktop (Glass Top)

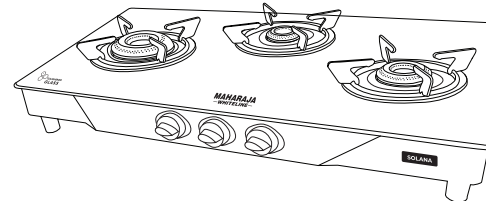 

3 Burner Gas Cooktop (Glass Top)

Solana Gas Cooktop

Please read this instruction manual carefully before operating your gas cooktop. Retain it for future reference. Record model name & serial number of the machine. Please quote this information when you require service.

INSTRUCTION MANUAL

GAS COOKTOPS

2 PRODUCT WARRANTY YEARS

5 GLASS WARRANTY* YEARS

FEATURES



SHATTER PROOF GLASS COOKTOP



MILD STEEL BODY



HIGH POWERED BRASS BURNERS



SUPERIOR QUALITY KNOB WITH FIRM GRIP



POWDER COATED PAN SUPPORT



HIGH GRADE ALUMINIUM MIXING TUBE



ANTI-SKID RUBBER FEET



STAINLESS STEEL DRIP TRAYS



EASY TO CLEAN

Product Type		Solana Series	
		Glass Cooktop	Glass Cooktop
Burner Type		2 Burner	3 Burner
No. of Burners	Jumbo Burner	1	1
	Large Burner	1	1
	Small Burner	-	1
Burner Size (mm)	Jumbo Burner	92	92
	Large Burner	79	79
	Small Burner	-	69
Burner Rating (g/h)	Jumbo Burner	209 x 1	209 x 1
	Large Burner	189 x 1	189 x 1
	Small Burner	-	143 x 1
Burner Rating (Kcal/h)	Jumbo Burner	2279 x 1	2279 x 1
	Large Burner	2064 x 1	2064 x 1
	Small Burner	-	1555 x 1
Ignition Type		Manual	Manual

*Only if Manufacturing Defects

INSTRUCTION FOR USE

- The LP Gas Cooktop is simple & safe to use. Begin by placing the gas cooktop on a horizontal working table.
 - Connect the gas stove to the gas cylinder by fitting the free end of the rubber tube to the inlet connection nozzle. The rubber tube should be laid in such a manner so as to avoid sharp bends.
 - While lighting the burner, first open the gas-regulating valve on the cylinder. Bring a lighted match stick close to the burner which is to be lit. Then, push the relevant knob and turn it in the clock / anti clockwise (as per model specification) direction to the "ON" position.
 - While putting off the burner, first close the regulating valve that is provided with the gas cylinder, and then turn the cooktop knob to "OFF" position.
 - The gas cylinder should not be tilted horizontally while in use.
 - Take care to avoid spillage while cooking as this may result in extinguishing of flame and clogging of burner holes.
 - Before removing a dish from the burner, turn off the appropriate knob. As a safety precaution, keep the main regulating valve of the cylinder closed when you are not using your gas cooktop.
- Do not use a plastic vinyl hose as it may be inflammable. The rubber hose should not touch any part of the cooktop or be kept underneath it.
- Switch off the fans in the kitchen when the cooktop is in use.
 - Make sure the rooms / kitchen where the cooktop is placed in are well ventilated. It is not advisable to use the cooktop for long periods in a small room or in a closed spaces without proper ventilation.
 - While in use & immediately after use, do not touch the pan supports as they get very hot.
 - For better & longer service, keep your cooktop clean at all times. The pan support & spill tray (according to model) can be removed for cleaning purposes.
 - Never attempt to dismantle or repair the cooktop on your own. In case of any difficulty or problem contact your gas dealer or contact our customer care executive to have it addressed.

GAS LEAK

If a gas leak is felt through a gas smell or otherwise, immediately close the main gas valve of the cylinder & any of the burners if they are already in "ON" position on the cooktop. Open up all windows and call your gas supply agent / gas dealer customer care center immediately. Do not switch "ON" or "OFF" any electric point or light a match stick or use a lighter when a gas leak is detected / suspected.

IMPORTANT CARE AND MAINTENANCE INSTRUCTIONS

- Use liquefied Petroleum Gas at 2.942 KN/m2 (30 gf./cm2).
- Ensure there are no inflammable substances kept near the cooktop.
- Use the cooktop for cooking purposes only.
- For the hose / tube, use a quality rubber hose only, suitable for use with an LPG gas cooktops/stoves.

TROUBLE SHOOTING CHART

PROBLEM	POSSIBLE REASON	ACTION
Cooktop does not ignite	Main gas valve closed	Open main gas valve
	Rubber hose bent / blocked	Straighten the hose, or remove the blockage or change hose
	No gas supply	Replace the gas source
	Air mixed in the tube	Repeat to ignite to remove the air in the hose
Gas leakage / smell	Leakage from gas hose	Refit or replace the gas hose
	Gas knob not closed properly	Shut OFF gas knob properly
	Burner not lit after putting ON gas knob	Reignite the burner
	Leakage from gas cylinder regulator	Inform your gas dealer
If flame is abnormal	Flame ports are blocked	Clean the flame ports
	Burner top fitting	Fit burner in right position
	Knob position not correct	Knob should be at ON position
	Supply of Gas	Replace gas cylinder / regulator

The warranty is fully applicable against any defect arising out of defective material or faulty workmanship for a period of two year from the date of purchase.

WARRANTY TERMS AND CONDITIONS

Groupe SEB India (P) Ltd. ("Company") warrants to the purchaser of this Product that for a period of 2 years on Product commencing from the date of purchase, the Company will repair or replace free of charge any part or parts of the product, should the Company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only. The warranty will be governed by the following clauses:

- This warranty is valid only if this card is duly signed and stamped by our dealer and is produced along with the original customer's copy of the purchase bill.
- Warranty period starts from the date of purchase of product.
- The appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
- The appliance should not be repaired, tampered or altered by any agency or person other than an authorised company personnel or their service centres.
- The warranty shall not apply to replacements parts.
- Plastic parts, which are breakable, are not covered under this warranty.
- Warranty on glass is based subject to following terms and conditions:
 - Do not use tandoor oven/batti cooker/any other similar products on the glass top as this may block the flame and create abnormal temperature on the glass surface. The damage to the glass on account of this will not be covered under warranty.
 - Breakage due to external impact (glass hit by external articles like heavy objects, wall etc.) will not be covered under warranty.
- The appliances subject to normal wear and tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not covered by this warranty.
- The customer is responsible for bringing the defective product to the service centre/manufacturer for servicing and collecting the same at his/her own cost.
- The Appliance is meant for domestic use only.
- Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replaced/repaired part.
- Liability under terms of warranty is limited to the value of the repairs/replacement of the parts found to be defective with in the warranty period. All parts that have been replaced shall become the property of the company.
- Under the terms of warranty , installation, free service will be provided only within the municipal limits of the cities/towns where the company has its branches or authorized representatives. Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time to time.
- The decision of the company is final and binding on all matters arising out of this warranty.
- This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this the same shall be settled by an Arbitrator, In accordance with the provisions of Arbitration and conciliation Act, 1996.
- Any claim must be filed with in the warranty period. file a claim, the first end user must present the copy of the warranty card along with original purchase receipt showing the purchase and/or delivery date and the product identification to the service centre listed in the service centre directory