

Size 11cm x 17 cm

**WARRANTY CARD**

Model No. SI-131

Serial No. ....

C.M.No. .... Date of Sale. ....

Owner's Name and Address. ....

Tested By. .... Remarks. ....

**AUTHORIZED DEALER/FRANCHISEE**

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE



**MAHARAJA  
SERVICE APP**

[www.maharajawhiteline.com](http://www.maharajawhiteline.com)

Follow us on :

**Imported and Marketed by:**

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

**For customer feedback and complaints, please contact:**

**Service Executive:** Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

Tel : 011-43684999, 8860555777

e-mail : [maharajacare@groupeseb.com](mailto:maharajacare@groupeseb.com)

'Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.

**MAHARAJA<sup>®</sup>**  
**—WHITELINE—**



**Acqua Bliss**


Steam Iron

1200W

**INSTRUCTION MANUAL**

## PART DIAGRAM

1. Heatshield
2. Water Inlet Cover
3. Steam Knob
4. Handle Cover
5. Cord Exit
6. Pilot Light
7. Thermostat Knob
- 8a. Upper Tank
- 8b. Lower Tank
9. PTFE Soleplate
10. Wire Assembly

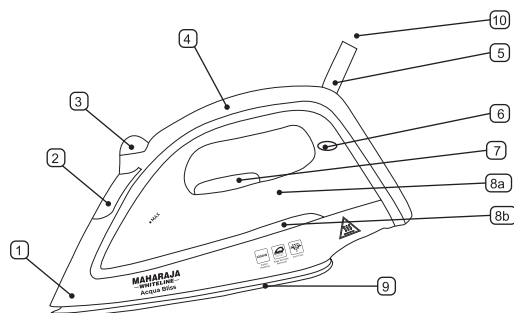

## GENERAL INSTRUCTIONS

When using the iron for the first time, you may notice a slight emission of smoke and hear some sounds made by the expanding plastics. This is quite normal and it stops after a short time. We also recommend passing the iron over an ordinary cloth before using it for the first time.

### PREPARATIONS

Soften the laundry to be ironed according to the international symbols on the garment label, or if this is missing, according to the type of fabric.

GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
*	synthetic	● low temperature
**	silk - wool	●● medium temperature
***	Cotton - linen	●●● high temperature
	Fabric not to be ironed	

Start ironing the garments requiring a low temperature.

This reduces the waiting times (the iron takes less time to heat up than to cool down) and eliminates the risk of scorching the fabric.

## STEAM IRONING

Remove the protection film from the steam plate before first use.

You can use your steam iron with usual tap water. Should the water be harder than 17°C dH, distilled or demineralized water has to be used to increase the steam iron's life span.

Fill in water tank (for steam ironing)

- Unplug the appliance and set the thermostat knob (7) to position minimal.
- Fill so much water into the tank until the water-level is visible with horizontal by hold tank in the middle of the transparent window.
- Now connect the steam iron with a correctly installed power point.

### Temperature control.

- Put the steam iron upright and select the desired temperature with the thermostat knob (7).
- By doing so pay attention to the care symbols on the textiles:
- Chemical fibred /synthetic
- Nature fibred/silk/wool
- Nature fibred/cotton/linen
- Assort your steam laundry to texture and corresponding steam temperature, iron the sensitive materials with the low steam temperature first as steam iron gets essentially faster hot than gets cold.
- The pilot light (6) indicates that the steam iron gets hot. After the pilot light is off, the selected temperature has been reached and you can start ironing.

### Dry / Steam

- This Steam functionality can be activated by choosing the right configuration given on the steam knob.

## SELF CLEAN

The function of self clean is to clean the soleplate that ensures long lasting steam performance.

You are recommended to follow below steps while using self clean functionality:

- Put the steam iron on self-clean mode by rotating the knob at the top of handle and remove the anti-scale collector unit.
- The calcium deposit on the collector can be removed by keeping the unit in the lime water for 4 hours post which just simply clean the collector under tap water. Put the cleaned collector back in the steam iron.

## IMPORTANT SAFETY INSTRUCTIONS

When using your flat iron, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING

1. Use iron only for its intended use.
2. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
3. The iron should always be turned to "min", before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
5. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
6. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
9. If the malfunction indicator goes on, the flatiron is not operating normally. Disconnect from the power supply and have the flatiron serviced by qualified service personnel.
10. The iron must be used and rested on a stable surface.
11. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

## SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

### SAVE THESE INSTRUCTIONS

More specifically:

DO NOT let children or untrained persons use the appliance without supervision.  
 NEVER immerse the iron, cable or plug in any liquid.  
 DO NOT leave the hot iron touching fabrics or very inflammable surfaces.  
 DO NOT leave the appliance unnecessarily plugged in. Disconnect the plug from the mains when the appliance is not being used.  
 NEVER touch the appliance with wet or damp hands.  
 DO NOT use the power cord or the appliance in order to pull the plug out of the socket.  
 DO NOT leave the appliance exposed to the weather (rain, sun, etc. ).  
 DO NOT leave the iron without supervision when it is connected to the power supply.  
 DO NOT fill the reservoir with water before removing the plug from the socket.

### PLEASE NOTE!

Do not use chemical additive, scented substances or decalcifiers. Failure to comply with the above-mentioned regulations leads to the loss of guarantee.

## HOW TO PUT IT AWAY

- At the end of the using, regulate the steam dial to "0" point.
- When there is no steam, regulate the temperature dial to "min" point. Disconnect the plug of the iron from the socket.
- Empty the reservoir by turning the iron upside down and gently shaking it.
- Leave the iron vertically to cool down completely.
- Roll up the power cord with the rewinder.
- Always put the iron away in a vertical position.

## ADVICE FOR GOOD IRONING

We recommend using the lowest temperatures with fabrics that have unusual finishes (sequins, embroidery, flush, etc.).

If the fabric is mixed (e.g. 40% cotton 60% synthetics), set the thermostat to the temperature of the fibre requiring the lower temperature.

If you don't know the composition of the fabric, determine the suitable temperature by testing on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.

Never iron areas with traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric, making them irremovable.

The size is more effective if you use a dry iron at a moderate temperature: excess heat scorches it with the risk of forming a yellow mark.

To avoid marking silk, woolen or synthetic garments shiny, iron them inside out.

To avoid marking velvet garments shiny, iron in one direction (following the fibre) and do not press down on the iron.

The heavier the washing machine is loaded, the more garments come out creased. This also happens when the spin drying revolutions are very high.

Many fabrics are easier to iron if they are not completely dry.

For example, silk should always be ironed damp.

## WARRANTY TERMS & CONDITION

**Groupe SEB India (P) Ltd. ("Company")** warrants to the purchaser of this Product that for a period of 2 years on product commencing from the date of purchase, the Company will repair or replace free of charge any part or parts of the product, should the Company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only. The warranty will be governed by the following clauses:

1. Warranty of the product is applicable on the production of original/tax invoice or duly filled warranty card (filled by the retailer).
2. Warranty period starts from the date of purchase from our authorised dealer only.
3. The appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
4. The appliance should not be repaired, tampered or altered by any agency or person other than an authorised company personnel or their service centres.
5. The Appliances subject to normal wear & tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not covered by this warranty.
6. Plastic Parts, which are breakable, are not covered under this warranty.
7. The Appliance is meant for domestic use only.
8. The decision to repair or replacement of parts shall be at the sole discretion of the company. Unless the product part is non-repairable, replacement shall not be provided.
9. Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replace/repaired part.
10. Liability under terms of warranty is limited to the value of the repairs/replacement of the parts found to be defective with in the warranty period. All parts that would have to be replaced shall become the property of the company.
11. The warranty shall not apply to replacement parts such as Carbon Brushes, Lid, Rubber Ring, Shaft Blade, Bush Handle & Main Cords.
12. Under the terms of warranty, Door step service shall be provided subject to presence of authorised service centre in the municipal limit areas.
13. The decision of the company is final and binding on all matters arising out of this warranty.
14. This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this the same shall be settled by an Arbitrator, In accordance with the provisions of Arbitration and conciliation Act, 1996.