


# MAHARAJA® — WHITELINE —

MIXER GRINDER

INSTRUCTION MANUAL

## IDENTIFICATION OF REPRESENTATIVE PARTS

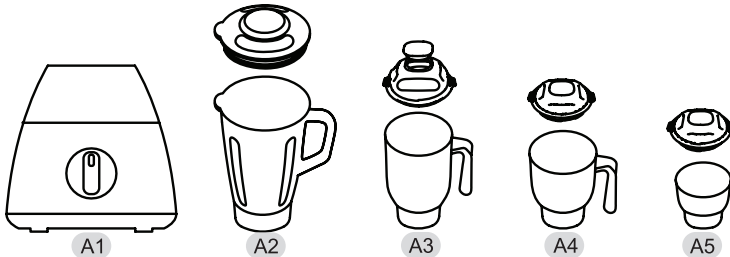

### MAXIMUM JAR CAPACITY

JAR	TYPES OF JAR	CAPACITY	WET CAPACITY (Rated) Max	DRY CAPACITY (Rated) Max.
A2	Blender Jar	1.5L	600ml	NA
A3	Wet Grinder (Liquidizer) Jar	1.5L	600ml	NA
A3	Wet Grinder (Liquidizer) Jar	1.2L	480ml	NA
A4	Dry Grinder Jar	1.0L	NA	400ml
A4	Dry Grinder Jar	700ml	NA	300ml
A5	Multi mix (Chutney)	400ml	160ml	200ml

A1- Basic Unit  
Note: \*\* (Jars Types) & \* (Jar Capacities) are model specific

### STANDARD RECIPES

S.NO	RECIPE	TYPES OF JARS	QUANTITY	TIME
1	Wet Grinding	A3	<b>For: 500W &amp; 550W:</b> Urad Dal - 200g + 450ml Water soaked for 12hrs. As and when needed 90ml water can be added.	3 min
		A3	Parboiled Rice - 200g + 225ml Water soaked for 12hrs. As and when needed 45ml water can be added.	
		A3	<b>For: 600W &amp; 650W:</b> Urad Dal - 225g + 506ml Water soaked for 12hrs. As and when needed 101ml water can be added.	
2	Milk Shake	A2/A3	<b>For: 700W &amp; 750W:</b> Urad Dal - 250g + 563ml Water soaked for 12hrs. As and when needed 113ml water can be added.	3 min
		A2/A3	Parboiled Rice - 250g + 282ml Water soaked for 12hrs. As and when needed 56ml water can be added.	
3	Turmeric/ Garam Masala	A4	For 1L Jar capacity: 300g assorted spice/turmic roasted & cooled.	3 min
4	Wet Masala	A5	700ml Jar capacity: 210g assorted spice/turmic roasted & cooled.	3 min
5	Ginger Garlic Paste	A5	400ml Jar Capacity: 80g onion + 80g tomato.	3 min
6	Tomato puree	A2/A3	400ml Jar Capacity: 80g ginger + 50g garlic.	3 min
7	Lassi	A2/A3	For 1.5L / 1.2L Jar Capacity: 300g medium sized tomatoes cut in 4 pieces.	3 min
			For 1.5L / 1.2L Jar Capacity: 500g curd + salt/sugar(As per taste) + crushed ice.	3 min

OPERATING SPEEDS: For Wet/Dry/Chutney grinding, use speed '1' and '2' for 30 seconds, thereafter use speed '3' till you finish grinding. For juicing/blending use speed 1 and 2.

### GENERAL DECLARATIONS

- This appliance can be used safely for household use only.
- Before using this appliance, please give your special attention to the safety precautions and thoroughly clean the jars before first use

### SAFETY PRECAUTIONS

- Place the appliance only on a flat, dry and stable surface.
- Keep the appliance away from sources of heat like gas or electric stoves.
- Make sure the voltage and the plug type are the same as your supply.
- The appliance is to be run only after assembling the jar unit and securing jar lid.
- Do not bend or put excessive pressure on the power cord or let the power cord hang over the edge of the table/slab or touch any hot surface.
- The appliance is not to be used if the power cord is damaged. Also, the power cord must be replaced by the manufacturer's service representative or similarly qualified person to avoid a hazard.
- Make sure the switch on the appliance is in the '0' position and each part is securely fit before operating it.

### WARNING

- This appliance is not safe to be used by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- Do not immerse the motor unit in water or try to clean the unit with running water as the motor unit, power cord, and plug should not encounter water/liquids.
- The chutney jar is fixed with chutney blade permanently. Do not attempt to remove it.
- Do not move the appliance during operation.
- Do not open the lid until the rotation of the blade stops completely.
- Do not touch food in the jar by hand. Always use the spatula provided in the box.
- Keep hands and utensils away from the moving parts while the appliance is in

operation to prevent the possibility of severe personal injury or damage to the appliance. The spatula may be used to stir ingredients only when the machine is Do not run appliance with an empty jar.

- Never load the jar ingredients beyond the maximum indicated levels.

### OPERATING INSTRUCTIONS

- Ensure that all the blades are assembled on the jar.
- Care shall be taken when handling the sharp cutting blades, emptying jars and cleaning them.
- Switch off the appliance immediately when the motor stalls or you observe smoke coming from within.

### TURMERIC GRINDING

- For best results, while grinding turmeric follow the instructions below:  
Roast whole turmeric in an open pan for a few minutes and then allow it to cool.
- Start by using the 'pulse' function to break the large pieces of turmeric into small ones and follow up by running the mixer on speed '3' to grind it to a fine powder.

### OVERLOAD PROTECTION

- The appliance is fitted with a Circuit breaker protection /Overload protection to automatically shut off power mechanism to avoid motor damage on account of overloading.
- If the appliance stops due to overloading, then 'switch off' the Mixer and remove the excess load from the jar. Post-extraction of ingredients and pausing for 2-3 minutes; press the red toggle switch located at the bottom and restart.

### CLEANING AND MAINTENANCE

- After usage, run the mixer grinder with warm water and a small quantity of detergent along with blade to dislodge food particles sticking under the washer (steel cap).
- Do not immerse jar collar or base of the mixer in water.
- The appliance may be cleaned with damp cloth and mild nonabrasive cleaner to remove any spots. Dry with clean soft cloth.
- Do not use abrasive cleaners on jars.

**TECHNICAL DATA \*\*\***  
**(Info varies modelwise)**

Wattage : 750W/ 500W  
Power supply : 230 volts/50Hz, Ac  
Speed : 3 speed with Pulse  
Rating : 30 minutes (5 minutes  
ON/ 2 minutes OFF)

Note: \*\*\*Technical data mentioned is model specific.

**WARRANTY TERMS AND CONDITIONS**

Groupe SEB India (P) Ltd. ("Company") warrants to the purchaser of this Product that for a period of

- 2 years on product & 2 years on motor for 500W product.
- 2 year on product & 5 years on motor for 750W product.

Commencing from the date of purchase, the Company will repair or replace free of charge any part or parts of the product, during the above mentioned warranty period, should the Company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only. The warranty will be governed by the following clauses:

- Warranty of the product is applicable on the production of original/tax invoice or duly filled warranty card (filled by the retailer).
- Warranty period starts from the date of purchase from our authorized dealer only.
- The Appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
- The Appliance should not be repaired, tampered or altered by any agency or person other than an authorized company personnel or their service centers.
- The Appliances subject to normal wear & tear, misuse, neglect, accident including technical breakdown etc. or non compliance of the instructions given in the instruction manual, improper installation is not covered by this warranty.
- Plastic Parts, which are breakable, are not covered under this warranty.
- The Appliance is meant for domestic use only.
- The decision to repair or replacement

of parts shall be at the sole discretion of the company. Unless the product part is non-repairable, replacement shall not be provided.

- Parts repaired or replaced under this warranty are warranted only for the remainder of the original warranty period, that is no fresh warranty period shall commence for the said replace/repaired part.
- Liability under terms of warranty is limited to the value of the repairs/replacement of the parts found to be defective with in the warranty period. All parts that would have to be replaced shall become the property of the company.
- The warranty shall not apply to replacement parts such as Carbon Brushes, Lid, Rubber Ring, Shaft Blade, Bush Handle & Main Cords.
- Under the terms of warranty, Door step service shall be provided subject to presence of authorised service centre in the municipal limit areas.
- The decision of the company is final and binding on all matters arising out of this warranty.
- This warranty is issued at Delhi, and courts at Delhi shall have exclusive jurisdiction over matters by or following from this warranty. In case of any dispute, arising out of this the same shall be settled by an Arbitrator, In accordance with the provisions of Arbitration and conciliation Act, 1996.

## WARRANTY CARD

Model No: ..... Serial No: .....

C.M.No: ..... Date of Sale: .....

Tested By: ..... Remarks: .....

AUTHORIZED DEALER/ FRANCHISEE

### COMPANY'S AUTHORIZED PRICE LIST FOR SPARES IS AVAILABLE WITH SERVICE FRANCHISEE


Marketed by: Groupe SEB India (P) Ltd.

C-67, 3rd Floor,  
DDA Sheds, Okhla Phase1,  
New Delhi-110020, India

### FOR CUSTOMER FEEDBACK AND COMPLAINTS, PLEASE CONTACT:

Service Executive: Groupe SEB India (P) Ltd.

C-67, 3rd Floor,  
DDA Sheds, Okhla Phase1,  
New Delhi-110020, India

Tel: 011- 43684999,  8860555777

e-mail: maharajacare@groupeseb.com

Bis Website:- <http://www.bis.gov.in>

\*Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.



MAHARAJA  
SERVICE APP



[www.maharajawhiteline.com](http://www.maharajawhiteline.com)