

Size 11cm x 17 cm

WARRANTY CARD

Model No. SI-133

Serial No.

C.M.No. Date of Sale.

Owner's Name and Address.

.....

.....

Tested By. Remarks.

AUTHORIZED DEALER/FRANCHISEE

COMPANY'S AUTHORIZED PRICE LIST FOR SPARES AVAILABLE WITH SERVICE FRANCHISEE



MAHARAJA
WhatsApp

Easy & Quickest Way to
Register a Complaint

www.maharajawhiteline.com

Follow us on :    

Imported and Marketed by:

Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

For customer feedback and complaints, please contact:

Service Executive: Groupe SEB India (P) Ltd.

C-67, 3rd Floor, DDA Sheds, Okhla Phase 1, New Delhi-110020, India

Tel : 011-43684999, 8860555777

e-mail : maharajacare@groupeseb.com

'Maharaja Whiteline' is registered trademark of Groupe SEB India Pvt Limited.

MAHARAJA[®]

—WHITELINE—




Acqua Superio
Steam Iron
1600W

INSTRUCTION MANUAL

PART DIAGRAM

1. Heatshield
2. Water Inlet Cover
3. Steam Burst & Spraying Button
4. Handle Cover
5. Cord Exit
6. Pilot Light
7. Thermostat Knob
8. Tank
9. PTFE Soleplate
10. Spray Jet
11. Steam Regulating Knob / Self-clean button

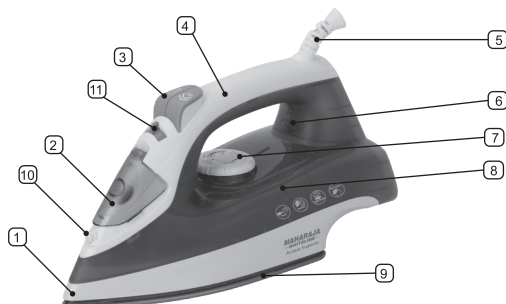

GENERAL INSTRUCTIONS

When using the iron for the first time, you may notice a slight emission of smoke and hear some sounds made by the expanding plastics. This is quite normal and it stops after a short time. We also recommend passing the iron over an ordinary cloth before using it for the first time.

PREPARATIONS

Soften the laundry to be ironed according to the international symbols on the garment label, or if this is missing, according to the type of fabric.

GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
*	synthetic	● low temperature
**	silk - wool	●● medium temperature
***	Cotton - linen	●●● high temperature
Fabric not to be ironed		

Start ironing the garments requiring a low temperature.

This reduces the waiting times (the iron takes less time to heat up than to cool down) and eliminates the risk of scorching the fabric.

STEAM IRONING

Remove the protection film from the steam plate before first use.

You can use your steam iron with usual tap water. Should the water be harder than 17°C dH, distilled or demineralized water has to be used to increase the steam iron's life span.

Fill in water tank (for steam ironing)

- Unplug the appliance and set the thermostat knob (7) to position minimal.
- Fill so much water into the tank until the water-level is visible with horizontal by hold tank in the middle of the transparent window.
- Now connect the steam iron with a correctly installed power point.

Temperature control.

- Put the steam iron upright and select the desired temperature with the thermostat knob (7).
- By doing so pay attention to the care symbols on the textiles:
- Chemical fibred /synthetic
- Nature fibred/silk/wool
- Nature fibred/cotton/linen
- Assort your steam laundry to texture and corresponding steam temperature, iron the sensitive materials with the low steam temperature first as steam iron gets essentially faster hot than gets cold.
- The pilot light (6) indicates that the steam iron gets hot. After the pilot light is off, the selected temperature has been reached and you can start ironing.

Dry / Steam

- This Steam functionality can be activated by choosing the right configuration given on the steam knob.

SELF CLEAN

The function of self clean is to clean the soleplate that ensures long lasting steam performance.

You are recommended to follow below steps while using self clean functionality:

- Put the steam iron on self-clean mode by rotating the knob at the top of handle and remove the anti-scale collector unit.
- The calcium deposit on the collector can be removed by keeping the unit in the lime water for 4 hours post which just simply clean the collector under tap water. Put the cleaned collector back in the steam iron.

IMPORTANT SAFETY INSTRUCTIONS

When using your flat iron, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use iron only for its intended use.
2. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
3. The iron should always be turned to "min", before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
5. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
6. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
9. If the malfunction indicator goes on, the flatiron is not operating normally. Disconnect from the power supply and have the flatiron serviced by qualified service personnel.
10. The iron must be used and rested on a stable surface.
11. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
12. If supply cord is damaged it must be replaced by our services agent. (Service Center) or similarly qualified person in order to avoid hazard.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS

More specifically:

DO NOT let children or untrained persons use the appliance without supervision.
NEVER immerse the iron, cable or plug in any liquid.
DO NOT leave the hot iron touching fabrics or very inflammable surfaces.
DO NOT leave the appliance unnecessarily plugged in. Disconnect the plug from the mains when the appliance is not being used.
NEVER touch the appliance with wet or damp hands.
DO NOT use the power cord or the appliance in order to pull the plug out of the socket.
DO NOT leave the appliance exposed to the weather (rain, sun, etc.).
DO NOT leave the iron without supervision when it is connected to the power supply.
DO NOT fill the reservoir with water before removing the plug from the socket.

PLEASE NOTE!

Do not use chemical additive, scented substances or decalcifiers. Failure to comply with the above-mentioned regulations leads to the loss of guarantee.

HOW TO PUT IT AWAY

- At the end of the using, regulate the steam dial to "0" point.
- When there is no steam, regulate the temperature dial to "min" point. Disconnect the plug of the iron from the socket.
- Empty the reservoir by turning the iron upside down and gently shaking it.
- Leave the iron vertically to cool down completely.
- Roll up the power cord with the rewinder.
- Always put the iron away in a vertical position.

ADVICE FOR GOOD IRONING

- We recommend using the lowest temperatures with fabrics that have unusual finishes (sequins, embroidery, flush, etc.).
 - If the fabric is mixed (e.g. 40% cotton 60% synthetics), set the thermostat to the temperature of the fibre requiring the lower temperature.
 - If you don't know the composition of the fabric, determine the suitable temperature by testing on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.
 - Never iron areas with traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric, making them irremovable.
 - The size is more effective if you use a dry iron at a moderate temperature: excess heat scorches it with the risk of forming a yellow mark.
 - To avoid marking silk, woolen or synthetic garments shiny, iron them inside out.
 - To avoid marking velvet garments shiny, iron in one direction (following the fibre) and do not press down on the iron.
 - The heavier the washing machine is loaded, the more garments come out creased. This also happens when the spin drying revolutions are very high.
 - Many fabrics are easier to iron if they are not completely dry.
- For example, silk should always be ironed damp.

WARRANTY

GROUPE SEB INDIA PVT LIMITED ("Company") warrants that the Company shall rectify any manufacturing defect in the steam iron ("Product"), carry out such repair/replacement (as the case may be) free of charge during the warranty period of 2 (two) years. The Company shall in no event be replacing the product as a part of warranty unless and until there is an irreparable manufacturing defect in the product as decided by the technical team of the Company.

The period of availing warranty shall commence from the date of purchase as mentioned on the valid tax invoice or on Warranty card duly filled, signed & stamped by authorised dealer of the Company. The Company is not required to provide any services pertaining to the product after the expiry of said warranty period.

TERMS AND CONDITIONS OF WARRANTY:

1. This warranty shall be valid only if the product shall be used only as per the guidelines provided in this instruction manual. The product is to be used only for domestic purpose and not for any commercial, rental or profit generating activities.
2. This warranty can only be availed by the first purchaser of the product and is not transferable and non-assignable.
3. The Customer is required to register the complaint with the Customer Care Centre of the Company by way of phone call, email or WhatsApp Chatbot.

4. The customer must present the valid warranty card or the valid tax invoice as a pre-condition before availing the warranty for the product as well as any related spares in the absence of which the Company may refuse to provide any warranty services.
5. Any repair or replacement done on the Product or any parts of the product during the warranty period, will in no event extend the Warranty period. The Warranty period is limited as provided herein, irrespective of the period of the product was not in use, was not giving proper performance, was under breakdown or was under repair by Company's authorised service centre.
6. The Company/its Authorised Service Centre reserves the right to retain any part/component/product replaced. The Company shall have exclusive right to replace the defective/unserviceable parts with the parts which may be new or refurbished free of charge during the warranty period.
7. Any repair or replacement carried out on the product or any part thereof by anyone other than authorised service centre, shall make this warranty void.
8. The Company shall provide Door-step service during the Warranty period. However, if the Product is located outside the municipal limits and serviceable area of Company's Authorised Service Centre, in such rare event the Company may refuse to provide Door-Step service and the Customer shall be required to bring the Product at the designated Service Centre of the Company or some other location within the municipal limits, at its own cost and expenses.
9. In case of any doubt regarding any conditions mentioned on this warranty card, including but not limited to authenticity of the Product, tax invoice, warranty card, part of the product etc, the decision of the Company shall be final and binding on the Customer.
10. The warranty is issued at New Delhi and courts at New Delhi shall have sole jurisdiction over matters covered or flowing from this warranty.
11. The Company shall not be liable for any indirect, special, consequential, special, incidental, punitive, exemplary or economical damage or loss. The Company's liability under or in relation to this warranty shall be limited to the purchase price paid by the Customer as per valid tax invoice.

THIS WARRANTY IS NOT APPLICABLE IN ANY OF THE FOLLOWING CASES:

- 1) The signed & stamped warranty card or the tax invoice is not presented to the service personnel at the time of claiming or availing the warranty.
- 2) The product installation, use or maintenance is not done as per the instructions given in this instruction manual or as per common sense/understanding of usage of electric iron for such actions which are not specifically stated in this Instruction Manual.
- 3) If the original serial number of the Product is removed, tempered or altered.
- 4) Violation of any warranty terms and conditions mentioned above.
- 5) The warranty doesn't apply to:
 - a) Plastic parts, Main Cord and Scratches on Soleplate.
 - b) Normal wear and tear of the products and parts.
 - c) Damage due to water contamination.
 - d) Damages resulting from accidents, mishandling, improper usage, negligence on the part of consumer.
 - e) Fluctuation in the supply voltage or usage of any power supply other than as specified on the Box.
 - f) Compliant not registered at the Customer care centre of the Company by way of phone call, email or WhatsApp Chatbot within the warranty period.